

Datasheet

Original | Version 1.0 | 11.2018

Artikelnr. 039 000 101



Impressum

Kesseböhmer Ergonomietechnik GmbH

Siemensstraße 6

73235 Weilheim/Teck

Germany

Telefon +49 7023 108-0

Telefax +49 7023 108-110

Copyright

© Copyright Kesseböhmer Ergonomietechnik GmbH 2018

All photos, graphics and texts are subject to copyright protection. Any reproduction or use of such graphics, photos and texts in other publications, such as electronic or printed publications, is not permitted without the explicit consent of Kesseböhmer Ergonomietechnik GmbH.

Contents

- 1 Features.....4
- 2 Type and dimensions.....6
- 3 Technical Data7
 - 3.1 PIN assignment.....8
 - 3.1.1 Motor socket.....9
 - 3.1.2 Handswitch socket..... 10
 - 3.1.3 Connector DATA..... 10
 - 3.2 Activ Protection System (APS) 11
 - 3.3 Type plate 12
- 4 End of life disposal 13
- 5 Standards 14
- 6 Notice 15

1 Features

- High efficient switch mode power supply (SMPS)
- Low standby power consumption, low field emission
- Control units with US and EU input voltage available
- Table height display with configurable offset
- Up 4 memory positions (depending on handset)
- Up to 2 motor groups
- APS (Active Protection System)
- Enhanced drive comfort
- Safety area
- Low speed area
- Plug detection and automatic detection of the number of connected drives
- Configurable stop conditions (overtemperature, overcurrent, timeout limit switches)
- Additional functions are available, depending on the handswitch model used
- (e.g. saving desktop positions, adjusting the desktop to saved positions, etc.)



DANGER

Danger! Electric shock.

Do not open the ControlBasic unit under any circumstances. There is a danger of electric shock.



DANGER

Only use the power cord supplied with the control unit. Check that it is not damaged. Do not ever operate the ControlBasic unit if the power cord is damaged.



DANGER

The ControlBasic control unit may only be operated with mains voltage as specified on the type plate.

ControlBasic control units are also available for the mains voltage used in other countries.

Detailed information is provided in the datasheet!

**WARNING**

The control unit must be mounted before commissioning and operation.

**DANGER**

When installing the ControlBasic and putting it into operation, be sure that the ControlBasic is acclimatized to the temperature and humidity values for operation, shown in the datasheet!

**WARNING**

In the event of a fault, please contact customer service immediately. Only original spare parts may be used for repairing the control units. Parts may only be replaced by qualified service technicians, otherwise the warranty/guarantee shall be null and void.

**WARNING**

Do not expose the ControlBasic control unit to moisture, drips or splashes.

**DANGER**

Only clean the ControlBasic unit with a dry or slightly moist cloth. Before cleaning, you must always unplug the power cord.


**DANGER**

Unplug the power cord during thunderstorm or if you do not intend to use the desk for a longer period. The control unit might otherwise be damaged by power surges.

Notice

Information about usage of the ControlBasic can be found in the user manual which is valid for the firmware version to the ControlBasic.

2 Type and dimensions

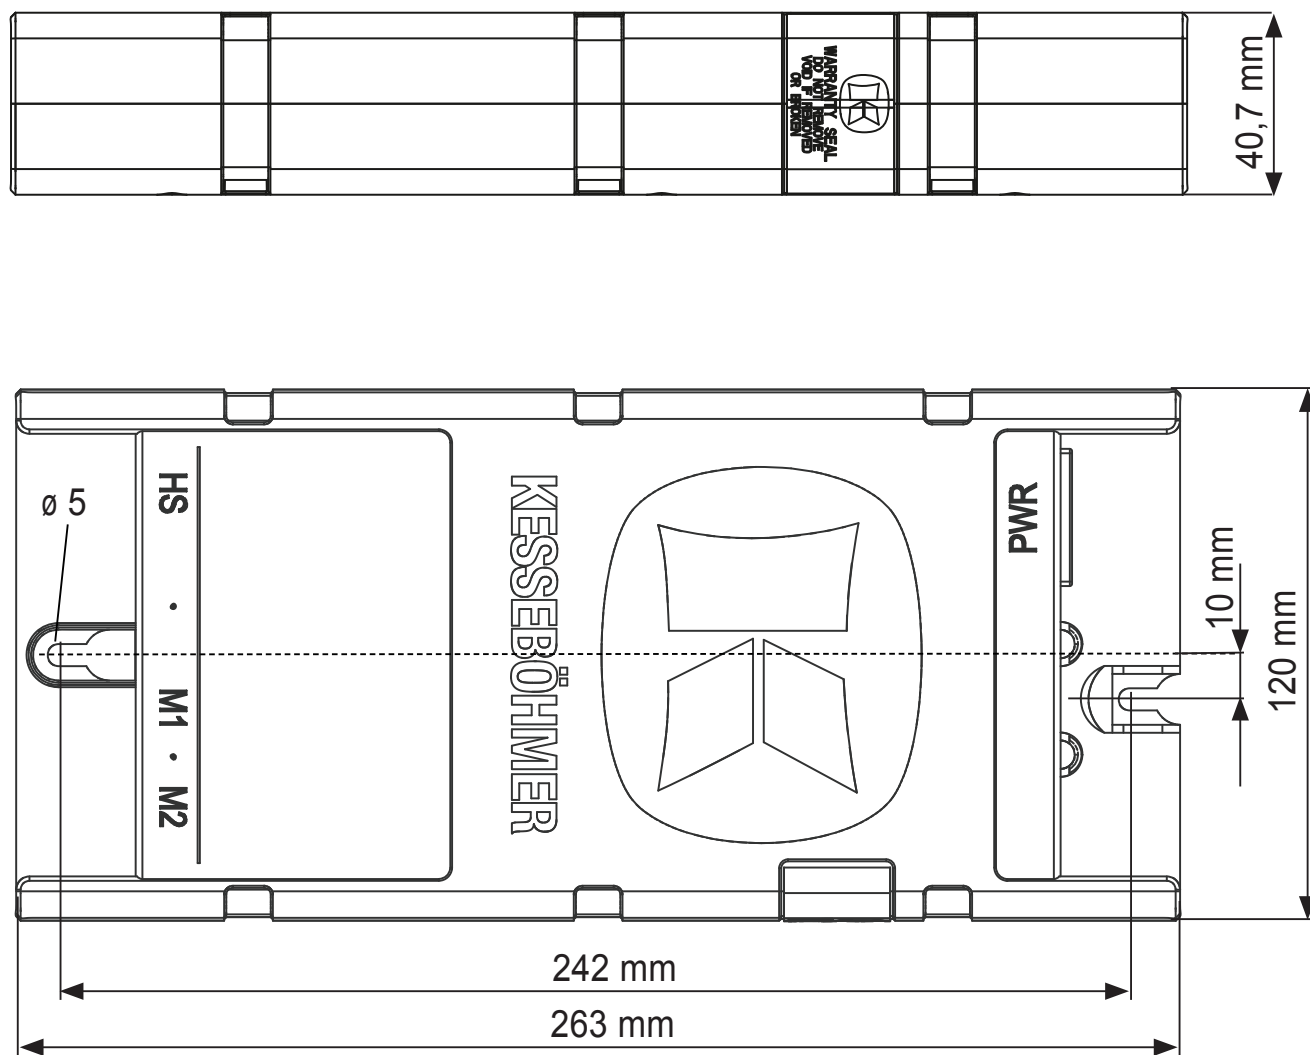


A drill template can be found in the mounting instructions, available as separate document.

3 Technical Data

Supply voltage	EU: 207/255,4V / 50/60Hz US: 90/127V / 50/60Hz
Standby power, primary (typical)	<0,1W
Operating voltage for internal and external electronics and hall sensors	5VDC±15% 600mA
Precision of motor current measurement 100% output voltage and 4-8A per motor	10%
Ambient temperature	0-40°C
Relative humidity (for operation)	5-85% (non condensing)
Storage and transport temperature	-40-85°C
Relative humidity (for storage)	5-90% (non condensing)
IP class	IP 20
Dimension (L x B x H) [mm] Tolerances according to	263 x 120 x 40 DIN 16742
Control	Normal cycle 2/18 Movement: 2minutes 7A/33V/231W Break: 18minutes
Max. current per motor channel	9A Total current restricted according to values shown above.
Weight	470g

3.1 PIN assignment

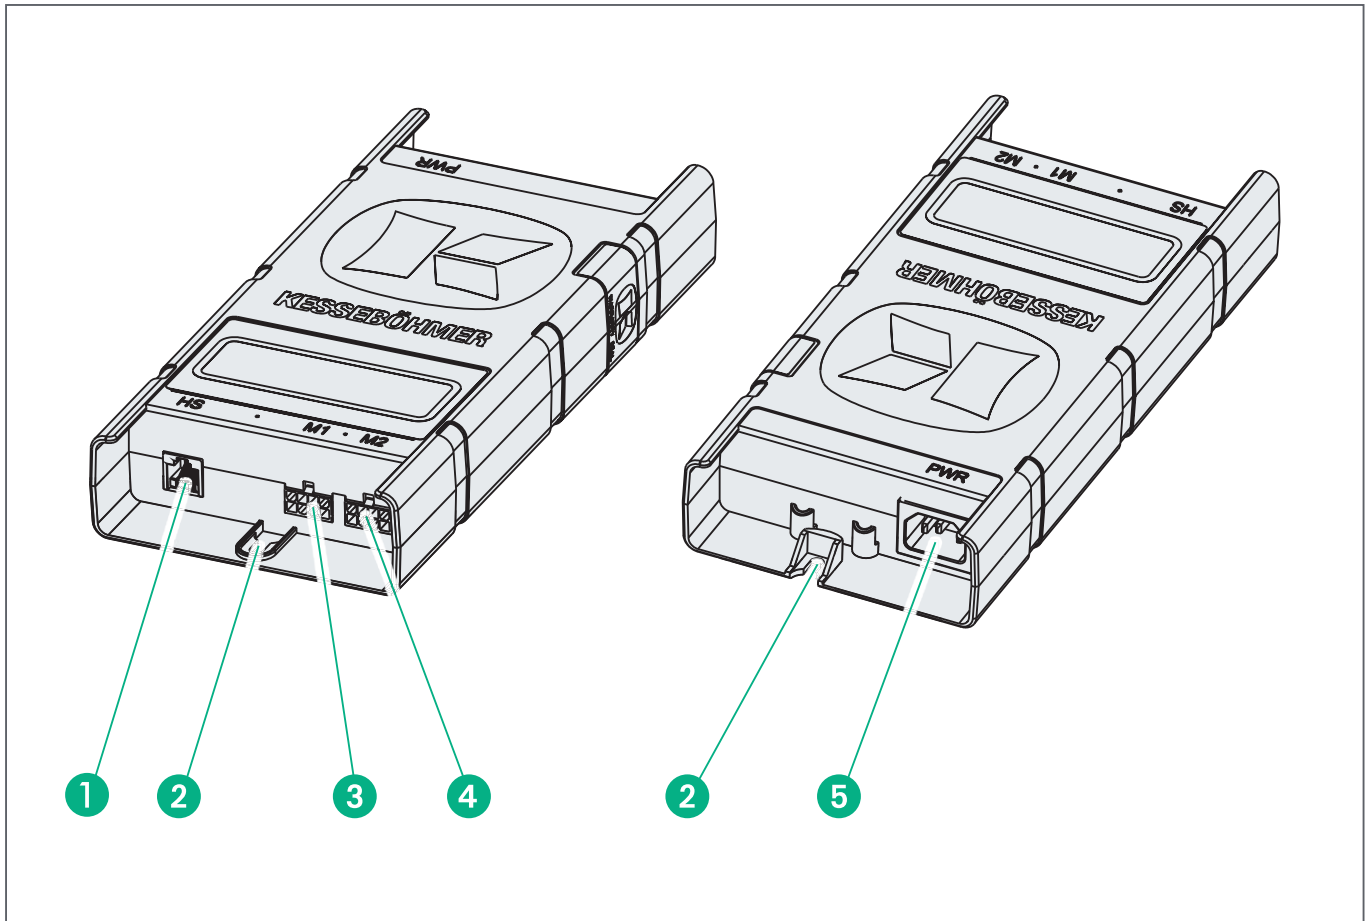

- 1 Handset socket HS
- 2 Mounting holes
- 3 Motor socket M1
- 4 Motor socket M2
- 5 Mains socket PWR



WARNING

It is not allowed to connect self-constructed products to Kesseböhmer motor controls. To prevent damage of the unit, use only components suitable for Kesseböhmer motor controls.

3.1.1 Motor socket

Pin assignment of motor socket



- | | | | |
|---|--------------|---|------------|
| 1 | Motor OUTA | 6 | SYNC |
| 2 | FSRRS | 7 | GND |
| 3 | 5V | 8 | Motor OUTB |
| 4 | Hallsensor 1 | | |
| 5 | Hallsensor 2 | | |



WARNING

To prevent damage of the unit, use only motors / motor cables suitable for Kesseböhmer motor controls.

Pin

Motor OUTA; OUTB
Hallsensor 1,2
5V, GND
SYNC
FSRRS

Description

Power supply lines for motors
Sensor input lines for hall sensors
Power supply lines for Hallboard
Synchronisation signal (digital output)
Response signal from hallboard
(input digital / analog)




WARNING

Please observe the maximum allowable loads (currents) for the 5V circuit in normal operation and standby, shown in the technical data. The load sum attached on all interfaces or the control unit must not exceed the values for the particular operating state!

3.1.2 Handswitch socket

Pin assignment of handswitch socket

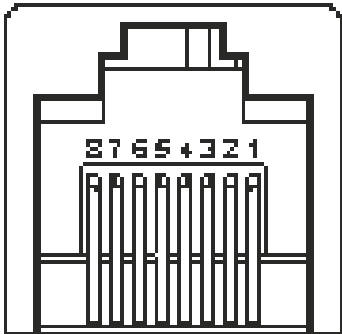

- 1 S1
- 2 S2
- 3 NC
- 4 GND
- 5 TX
- 6 5V
- 7 NC
- 8 RX



WARNING

To prevent damage of the unit, use only handswitches suitable for Kesseböhmer motor controls.

Pin	Description
S1, S2	switch inputs
TX, RX	digital communication
5V, GND	Power supply lines
NC	Pin3+7 not assigned



WARNING

Please observe the maximum allowable loads (currents) for the 5V circuit in normal operation and standby, shown in the technical data. The load sum attached on all interfaces or the control unit must not exceed the values for the particular operating state!

3.1.3 Connector DATA

Pin assignment of motor socket



- | | | | |
|---|--------------|---|--------------|
| 1 | Hallsensor 1 | 6 | GND |
| 2 | 5V | 7 | SYNC |
| 3 | FSRRS | 8 | Hallsensor 2 |
| 4 | Motor OUTA | | |
| 5 | Motor OUTB | | |



WARNING

To prevent damage of the unit, use only accessories suitable for ControlBasic motor controls.



WARNING

Be sure that the connector is plugged in correctly in the socket!



WARNING

When components like sensors shall be disconnected from the Connector DATA, be sure to unlock the 8pin connector on the cable properly! There is a fixing hook on this connector which must be pressed.

Pin	Description
Motor OUTA; OUTB	Power supply lines for motors
Hallsensor 1,2	Sensor input lines for hall sensors
5V, GND	Power supply lines for Hallboard
SYNC	Synchronisation signal (digital output)
FSRRS	Response signal from hallboard (input digital / analog)



WARNING

Please observe the maximum allowable loads (currents) for the 5V circuit in normal operation and standby, shown in the technical data. The load sum attached on all interfaces or the control unit must not exceed the values for the particular operating state!

3.2 Activ Protection System (APS)

Pay attention to the following instruction if you are using the new APS (Activ Protection System)

Notice


Please note the following for maximizing APS functionality:
To ensure the best possible pinch protection, a **mechanical brake** must be fitted that is applied when the electric height-adjustable desk moves down.

Notice

Without a mechanical brake, cut-out sensitivity may be reduced under load. However, if there is no load on the desktop, APS will function properly even without a brake.

Notice

The APS-sensitivity and the APS-cut-off value depend on the whole system (Mechanical and electrical components). To evaluate the APS -capability of a height adjustable table, please contact Kesseböhmer!



DANGER

In spite of APS being in place, there may still be a risk of pinching in exceptional cases, as it is not only the control unit, but also the interaction between the mechanical and electronic systems that is responsible for cutting out the motor. In addition, the mechanical components, motor and ambient conditions all affect cut-out sensitivity.

The control unit manufacturer, Kesseböhmer cannot therefore eliminate this residual risk completely or accept any liability.

3.3 Type plate

The following figure shows the type label and its location on the ControlBasic housing.

Type plate (example) and ist position on the ControlBasic

Made by: Kesseböhmer Produktions GmbH & Co. KG; Tobelwasenweg 5;
73235 Weilheim/Teck



Made in EU
039000101 9005
629-1129-680AS2
B.Box.BSC + 1-2 BN EU MEB
Type: sss ED: 10%
S.N.KB: xxxxxxxxxxxxxxxxxxxx



dd.mm.yyyy

Type: 106.30x.hhh
Input: xxxV-/50-60Hz/xA
Output: max. xxxVA/28V---

Duty Cycle: 2min on/18min off
S.N.H.: xxxxxxxxxxxxxxxxxxxx


 CE_{xx}



Notice

Specifications on the type label are dependent on the version of the Control-Basic control box (see technical data).

Text alignment on the type plate of ControlBasic

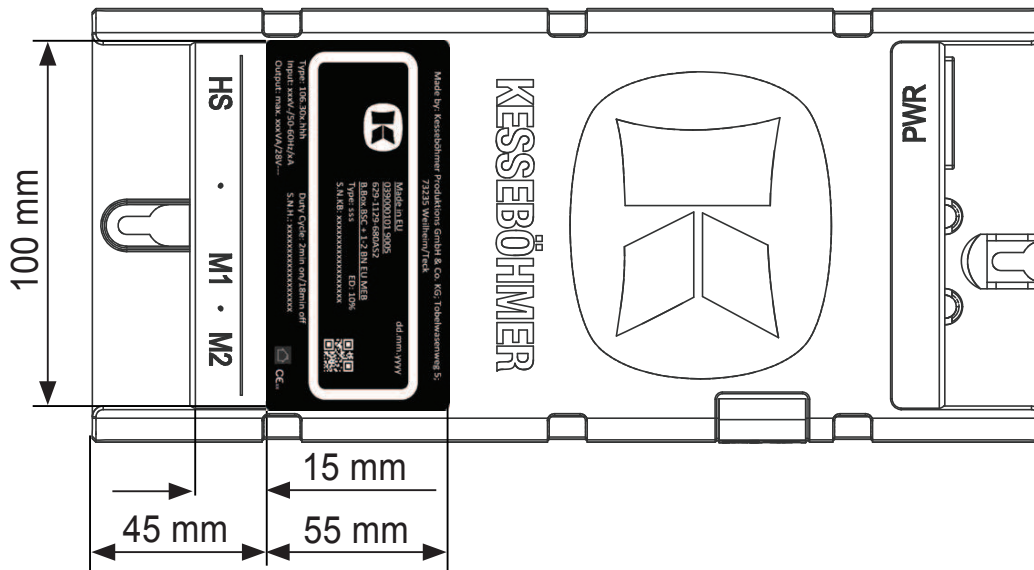

4 End of life disposal

When you no longer require the ControlBasic control unit. Please note the following for disposal:



The ControlBasic unit is electrical or electronic equipment according to directive 2012/19/EU and therefor marked with the symbol depicted on the left.

Notice

Ensure eco-friendly disposal of all the control unit components. Separate the plastic and electronic parts for collection.



This produkt is RoHS compliant according to directive 2011/65/EC!



This product is REACH compliant according to directive 2006/121/EC (Edict 1907/2006)

5 Standards

Europe

- IEC 60335-1:2010 (EN:2012)
- IEC 61000-6-3:2016 (EN:2011)
- IEC 61000-6-2:2008-01-01 (EN:2006)
- IEC 61000-3-2:2005-2009 (EN:2006-2011)
- EN 61000-3-3:2013 (EN:2009)
- EN 62233:2005 (EN:2008-2009)
- DIN EN ISO 13849-1:2016-06
- LVD (Low Voltage Directive); EU Directive 2006/95/EC
- EMC (Electromagnetic Compatibility) according to EU Directive 2004/108/EC

USA

- UL 60950-1:2007-03-27
(Information technology equipment - Safety - Part 1: General requirement)

Canada

- CAN/CSA-C22.2 No. 60950-1B AMD 2:2014
(Information Equipment - Safety - Part 1: General Requirements (BI-National standard, with UL 60950-1))

Australia

- AS/NZS 60335.1:2011
(Household and similar electrical appliances - Safety General requirements (IEC 60335-1 Ed5,MOD))

6 Notice

[illegible]



KESSEBÖHMER

Kesseböhmer Ergonomietechnik GmbH

Siemensstraße 6

73235 Weilheim/Teck

Germany

Telephone +49 7023 108-0

Telefax +49 7023 108-110

www.kesseboehmer.de